

# AIRPORT DIAGRAM

 
AL-291 (FAA)

NORFOLK INTL (O.R.F.)  
NORFOLK, VIRGINIA

ATIS  
127.15  
NORFOLK TOWER  
120.8 257.8  
GND CON  
121.9  
CLNC DEL  
118.5



FIELD  
ELEV  
27



JANUARY 2015  
ANNUAL RATE OF CHANGE  
0.0° W

ARRIVAL TERMINAL INTERNATIONAL GATE

DEPARTURE TERMINAL

FIRE STATION FUEL DISPENSING

ILS HOLD

ELEV 16

BLAST PAD  
200 X 150

ILS CRITICAL AREA

36°54.0'N

NE-3, 14 SEP 2017 to 12 OCT 2017

ELEV 18

138.9°

487.5 X 150

AIR CARGO

U.S. CUSTOMS

ILS HOLD

ILS HOLD

FUEL FARM

TWR 165

BLAST PAD  
200 X 150

ELEV 18

ILS CRITICAL AREA

318.9°

ELEV 22

GENERAL AVIATION AREA

RWY 05-23  
PCN 54 R/B/X/T  
S-150, D-200, 2S-175,  
2D-350, 2D/2D2-475  
RWY 14-32  
PCN 19 F/C/X/T  
S-75, D-100, 2S-127

NE-3, 14 SEP 2017 to 12 OCT 2017

CAUTION: BE ALERT TO RUNWAY CROSSING CLEARANCES.  
READBACK OF ALL RUNWAY HOLDING INSTRUCTIONS IS REQUIRED.

76°12.5'W

76°12.0'W

76°11.5'W

# AIRPORT DIAGRAM

NORFOLK, VIRGINIA  
NORFOLK INTL (O.R.F.)